

Air-Con Monitor Advanced

These mode settings are best set via the USB + PC software after setting up the stored commands from the Air-con remote, so can be skipped through.

