

Air-Con Monitor Advanced

Has to be set up using the programming button

Programming button and or USB software

Start

Mode 1 - Store off command

(Remove the front cover first to view the circuit board).
Give the black programming button a short press.

Give the black programming button another short press. The green led will come on for up to 10 seconds to receive the off command

While the green led is on point your air-con remote control at the monitor and press the off button, when the off command is received and stored the green led will go out

Did the green led go out before you were able to send the off command?

Advance to mode 2 - Test off command

Press and hold down the black programming button until you see 2 red led flashes every 3 seconds and release the button.

Give the black programming button a short press, the green led will flash each time you press the button to indicate the stored off command is being sent. You can test to check your air-con is switching off.

Advance to mode 3 - Set non movement time

Press and hold down the black programming button until you see 3 red led flashes every 3 seconds and release the button. (The green led will also flash depending on the setting below)

Set the amount of time that no movement is detected before sending the off command by the green led. Use a short button press to scroll through each of the settings.

1 green flash every 3 seconds = 15 mins (default)

2 green flashes every 3 seconds = 30 mins

3 green flashes every 3 seconds = 60 mins

4 green flashes every 3 seconds = Disabled

When the green led is flashing the number of times for your setting you can advance to the next mode.

Advance to mode 4 - Set night feature

Press and hold down the black programming button until you see 4 red led flashes every 3 seconds and release the button.

Do you want to stop the off command being sent at night?

Yes

No

Use a short button press and the green led will come on - Enabled

The green led is off by default, if the green led is on then use a short button press to switch it off

Advance to mode 5 - Store up temp command

Press and hold down the black programming button until you see 5 red led flashes every 3 seconds and release the button.

Give the black programming button another short press. The green led will also come on for up to 10 seconds to receive the up temp command

While the green led is on point your air-con remote control at the monitor and press the up temp button, when the up temp command is received and stored the green led will go out

Did the green led go out before you were able to send the up temp command?

Yes

No

Advance to mode 6 - Test up temp command

Press and hold down the black programming button until you see 6 red led flashes every 3 seconds and release the button.

Give the black programming button a short press, the green led will flash each time you press the button to indicate the stored up temp command is being sent.

Exit Programming Mode

To exit the programming mode press and hold down the black button until the red led stops flashing. Or wait 15 seconds to automatically come out

Finish